

## ■ Complete Warning Symbols Quick Reference

Symbol / Light	What It Means	How to Fix It
■ Water drop icon	Water tank is empty	Remove and refill the water tank to the MAX level
■ Water drop + radiating lines	Water tank is missing or not seated correctly	Reinsert the tank and press it in until it clicks into place
■ Water filter icon	Time to replace the water filter	Replace filter → hold Settings 5s → press Descalate → press any bean icon → press Descalate again
■ Red triangle (alone)	General alarm — machine needs cleaning or infuser issue	Run the rinse/clean cycle; check infuser is correctly seated
■ Red triangle + radiating lines	Infuser is not in its place	Re-seat infuser behind the water tank (machine must be OFF)
■ Red triangle + coffee bean icons	Bean hopper is empty or nearly empty	Add coffee beans to the hopper
■ Red triangle + grinder lines	Grinder set too fine; coffee flow is blocked	Adjust grinder one step coarser; brew several shots until flow normalizes
■ Red triangle + bypass doser (scoop) icon	Bypass doser selected but no ground coffee was added	Add one level scoop of pre-ground coffee to the bypass doser
■ Red triangle + bean + ground coffee icons	Too much coffee added to the bypass doser	Use only one level scoop; switch to milder strength if needed
■ Red triangle + water tank + steam button	Internal water circuit is empty	Turn steam knob to hot water position (do NOT press steam button) until error clears
■ Grounds bin icon	Grounds container is full	Empty the used coffee puck bin
■ Grounds bin + radiating lines	Grounds container is missing	Reinsert the grounds bin and ensure it sits correctly
■ Descalate icon (alone)	Time to descale the machine	Run full descale cycle (~45 min); machine still usable but don't delay
■ Red triangle + descalate icon	Descaling cycle was interrupted mid-process	Press Descalate button, turn steam knob to hot water position; complete the full cycle
X2 button flashing (first setup)	Machine needs to complete initial rinsing cycle	Fill tank to MAX, press X2 button; place a container under the spout
X2 button flashing (in settings)	Settings menu waiting for a second button input	Press the required second button within 30 seconds, or wait for auto-cancel

## ■ The Five Main Warning Icons Explained

■ Water Filter Symbol	Lights up when it's time to replace the water filter. After replacing, hold Settings for 5 seconds, press Descalate, press any bean/strength button, then press Descalate again to confirm. The warning will clear.
■ Water Tank Symbol	A plain water drop means the tank is empty — just refill it. A water drop WITH radiating lines means the tank is missing or not seated correctly. Reinsert and press until it clicks.

<b>■ General Alarm Symbol</b>	The red triangle with an exclamation mark is a multi-purpose alarm. On its own, it usually means the machine needs internal cleaning. Combined with other icons, it points to specific problems (see the Quick Reference table above).
<b>■ Grounds Container Symbol</b>	A plain grounds bin icon means the bin is full — empty it. With radiating lines, the bin is missing. Reinsert it and make sure it is sitting correctly in place.
<b>■ Descaling Symbol</b>	Time to descale. The full cycle takes up to 45 minutes. You can still use the machine while active, but don't delay — skipping leads to bitter coffee and temperature issues. Combined with a red triangle means the cycle was interrupted and must be completed first.

## ■ X2 Button Flashing — Two Scenarios

<b>First-time setup</b>	Fill water tank to MAX. The X2 button will flash — press it to begin the rinsing cycle. Place a container under the spout. If it keeps flashing, you used less than MAX water — refill and press again.
<b>In settings menu</b>	X2 flashes when the machine is waiting for you to press a second button to confirm a setting change (e.g., water filter, temperature). Press the required button within 30 seconds or the menu will auto-cancel.

**Pro Tips**

- Always turn the machine OFF before removing or reinserting the infuser.
- Never stop a descaling cycle mid-way — the machine will lock until it's completed.
- After changing grinder settings, brew 2–3 shots before expecting normal flow.
- When switching coffee brands, you may need to readjust the grinder slightly.
- Always fill the water tank to MAX when prompted — not just partially.